



PARKSIDE®

DIY

Teepee



1 hour

DIY -
Level



Hardware list

- 5x spruce dowel rods 30 mm x 2000 mm (minimum size)
- 1x piece of fabric of your choice of a suitable size 2600 mm x 1800 mm (alternatively: an old bed sheet)
- 1x PARKSIDE coconut fibre rope min. 2000 mm

Tools

- PARKSIDE mitre saw
- PARKSIDE 20V cordless hot glue gun
- PARKSIDE 12V cordless stapler
- PARKSIDE 120 grit sandpaper
- PARKSIDE staples
- PARKSIDE hot glue sticks
- PARKSIDE ruler
- PARKSIDE pencil




Work safety advice:

A large number of appliances are used in this project. Please always pay attention to your safety first and use the necessary protective equipment.

Sizes

quantity	material	part	size in mm	note
5x	spruce dowel	rods (A)	30 mm x 2000 mm	
1x	coconut fibre	rope bar holder (B)	at least 2000 mm	shortened as required
1x	fabric	tent tarpaulin (C)	130 mm x 2800 mm	

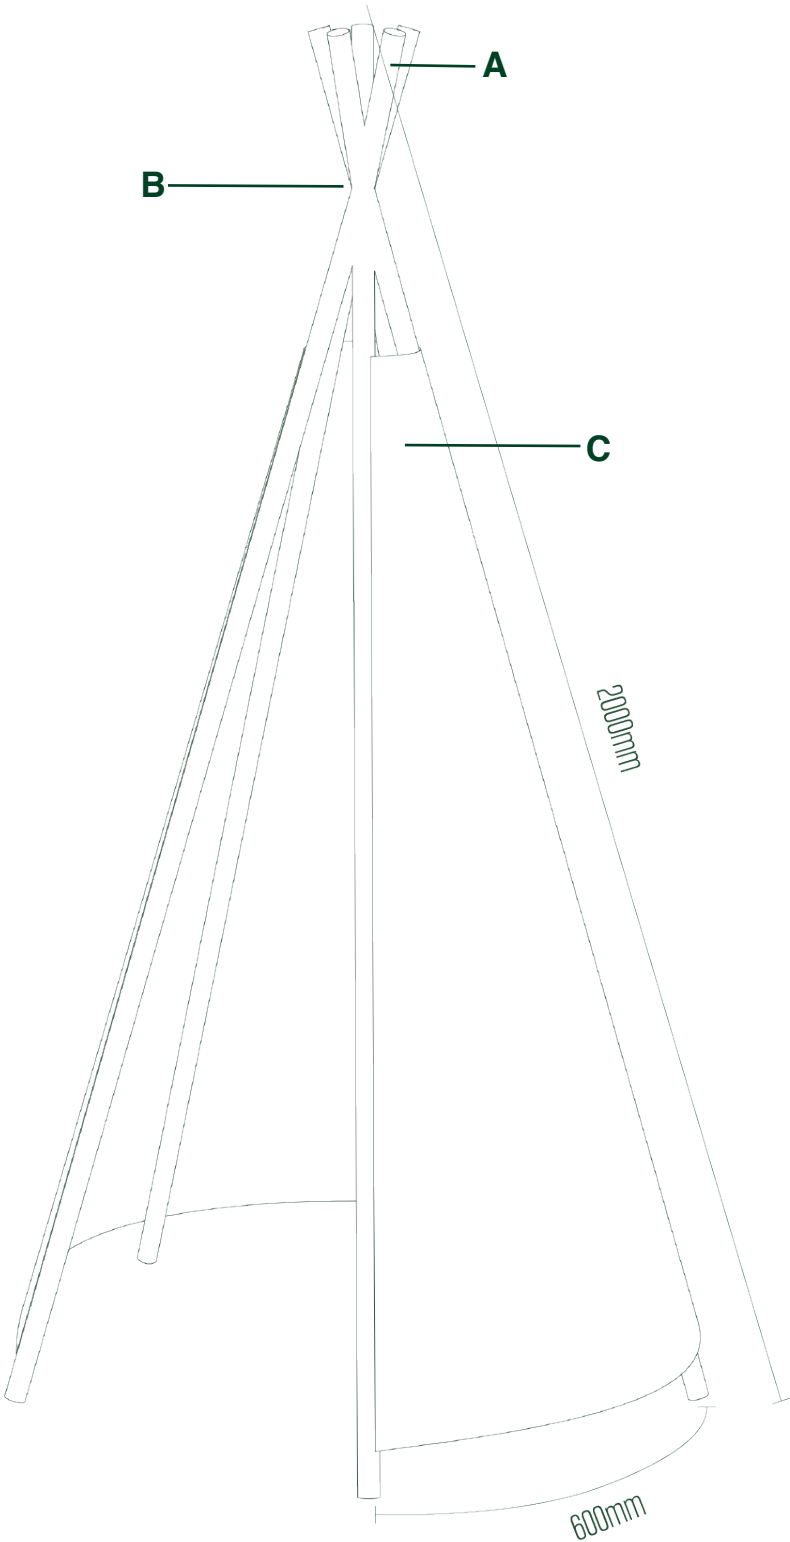

LET'S GET STARTED

Step 1: Cutting dowel rods (A) to size

If necessary, adjust length of rods (A) using the mitre saw.



Step 2: Round off sharp edges

Mill and sand cut edges until you get a smooth surface.



Step 3: Binding the dowel rods together (B)

Place the 5 rods on top of each other on a table and bind them together using a rope approx 20 cm from the top. Wrap the rope around the rods several times and make several knots (double knots) as required.



Step 4: Setting up the teepee

Set up the wooden rod frame, checking that the bound rod section is at the top. Now open out the single rods checking that the rods are placed at an even distance (approx. 600 mm).



Tip:

A second pair of hands is useful for doing this, if you can find them! If the frame is not robust enough, you can reinforce the knots at the top using a piece of string.

Step 5: Attaching fabric (C)

When the frame is standing securely upright, drape the fabric around the rods, until you are pleased with the arrangement. Remember to leave an opening at the front! Roll the fabric around the rods at the opening, and tack it firmly into place.



Step 6: Fixing the fabric

When the fabric has been tacked to the rods at the opening, fix the fabric to the other rods from the inside with the help of the hot glue gun.

Step 7: Folding any excess fabric

You can either cut off any excess fabric draping on the ground or just fold it over and glue it down - this will also allow you to create practical pockets!



Tip:

Since hot gluing can lead to burns, always use a piece of wood or cardboard at the back as a finger protector.

Step 8: Enjoy!

You can now outfit your teepee with throws, pillows and fairy lights and look forward to well-deserved, cosy evenings!



**Here's wishing you fun
on you next project!**

**YOU
GOT
THIS!**